

Digital Home Safe Box User Manual

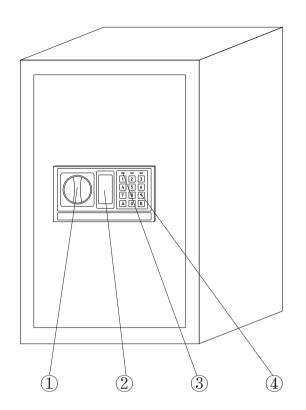

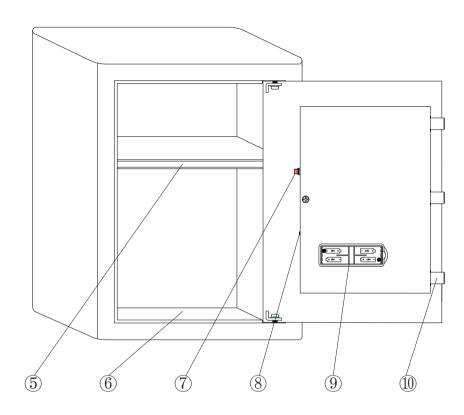

- ① Door Opening Knob
- ② Keyhole Cover
- 3 Indicator Lights
- 4 Digital Keypad

- (5) Removable Shelve
- 6 Felt Pad
- 7 Red Setting Button 8 LED Light
 - D Red Setting Button (9)

- 9 Battery Case
- 10 Solid Pry Bolts \times 3

Package List:

Item	Picture	Qty	Item	Picture	Qty
Safe box		1	Fireproof bag		1
User Manual		1	Expansion Bolt	Jummu ()	4
Spare Key		2	Felt Pad		1

Extend 5 Years Warranty

Send your order number to following E-mail or Scan the QR code on the key tag to register warranty.



Instruction Video

Scan following QR code to watch the instruction video



Two Unlock Ways



Reset Personal Code



Anti-Theft Alert System




Set Optional Silent Mode

Operating Instructions

- (1) The yellow light will flash once every time the operation key is pressed.
- (2) If there is no subsequent key input after pressing any key for 10 seconds, it enters sleep mode.
- (3) Once entering sleep mode, all operations will be terminated, and pressing any key will wake up and enter the functional operation.
- (4) The keyboard lock can be set with two sets of passwords, which you can use with your family and friends. The initial password is "159", and the management password is blank.

How to Open the Safe

 Method 1: With the Spare Key









- (1) Remove the key cover and you can see the key hole.
- (2) Insert the key and turn counterclockwise.
- (3) Turn the knob clockwise to open the safe.

  Method 2: With the Password







- (1) Insert 4×1.5V AA batteries.
- (2) After entering the correct management password or personal password, press the "A" or "B" key to confirm. (The initial password is "159")
- (3) The buzzer will sound twice, and the green indicator light will light up to indicate that the password is correct.
- (4) Turn the knob clockwise to open the safe.

Setting Manage Password

- (1) Insert 4×1.5V AA batteries.
- (2) Press the "00" button and then press the red setting button. The buzzer will beep three times, and the yellow indicator light will light up to indicate that the management password has started to be set.
- (3) Enter any number from 3 to 8 digits and press the "A" or "B" key to confirm that the buzzer will beep twice. The yellow indicator light will turn off to indicate that the management password has been set or changed successfully. (The initial password is "159", management password is blank.)

Setting Personal Passwords

- (1) Insert 4×1.5V AA batteries.
- (2) Directly press the red setting button, the buzzer will beep twice, and the yellow indicator light will light up to indicate that the personal password has started to be set or changed.
- (3) Enter any number from 3 to 8 digits and press the "A" or "B" key to confirm that the buzzer will beep twice. The yellow indicator light turn off to indicate that the personal password has been successfully set. (The initial password is "159")

Anti-theft Alert System

- (1) If the password is entered incorrectly, press the "A" or "B" key to confirm, the buzzer will sound.
- (2) If the input is incorrect three times, the digital keypad will be locked for 30 seconds and the buzzer will sound for 30 seconds.
- (3) NOTE: If the input is incorrect three times again, the digital keypad will be locked for 5 minutes and the buzzer will sound for 5 minutes.


Low Battery Warning

When the voltage is insufficient, the green and red lights will light up at the same time. Although it can still continue to work for a period of time, but please replace the battery as soon as possible!

Silent Mode

Press "00A" to turn on mute mode, press "66A" to turn off mute mode.

Steps for Mounting

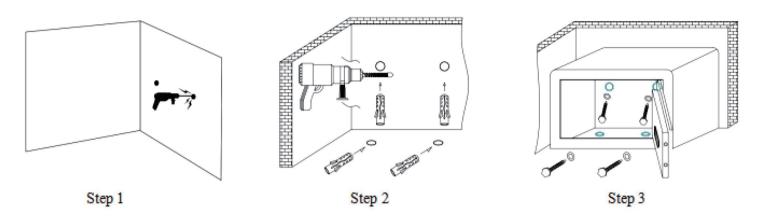

- 1 Drill the appropriate size holes for the anchors you are using
- ②Carefully press the anchor into the holes at this time
- 3 Mount the safe by running screws from inside of the safe and securing to anchors. Ensure the safe is mounted securely

