



# Large Document Safe Box


## User Manual

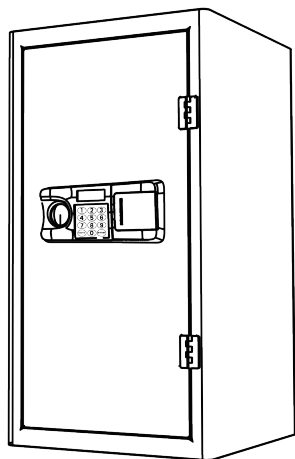

CE FCC  
Made in China




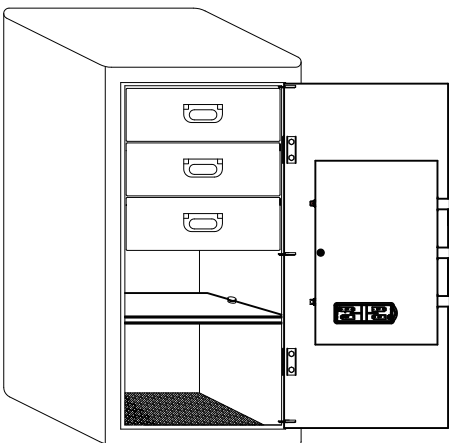


70G

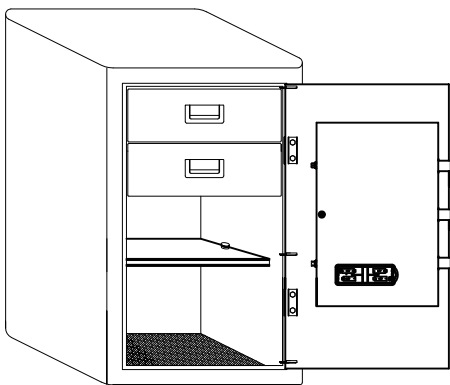


60G


## Package List

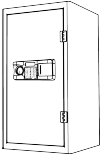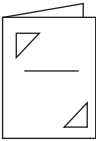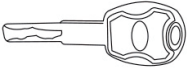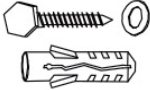Picture	Item	Qty	Picture	Item	Qty
	Large Document safe	1		User Manual	1
	Emergnecy Key	2		Mounting Screw	4


# Product overview

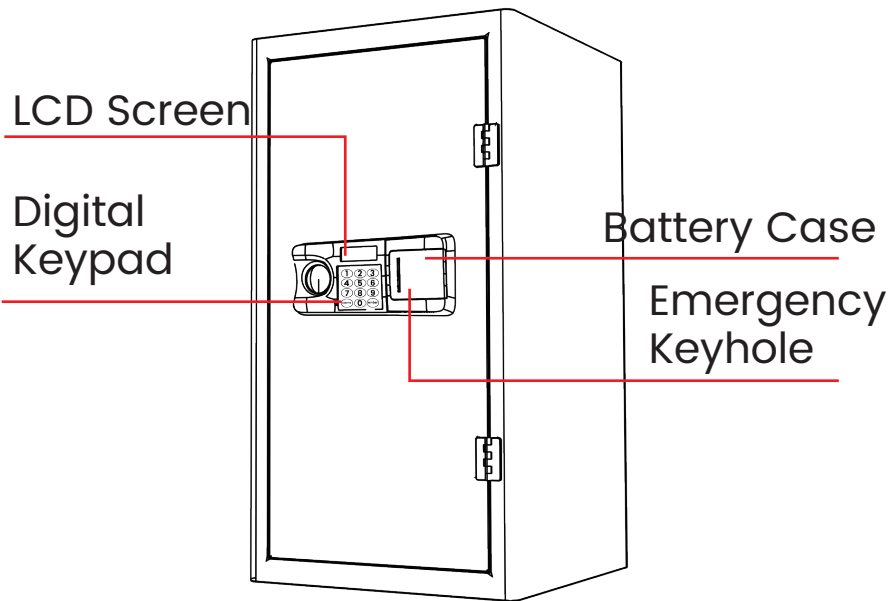

**60G**

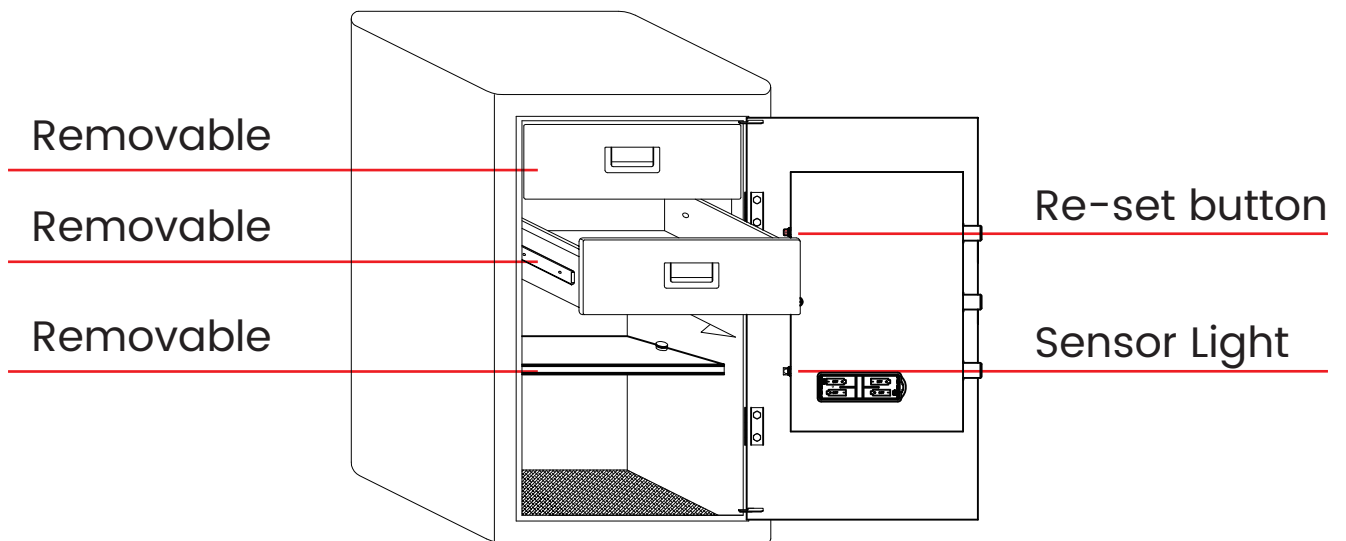


**70G**

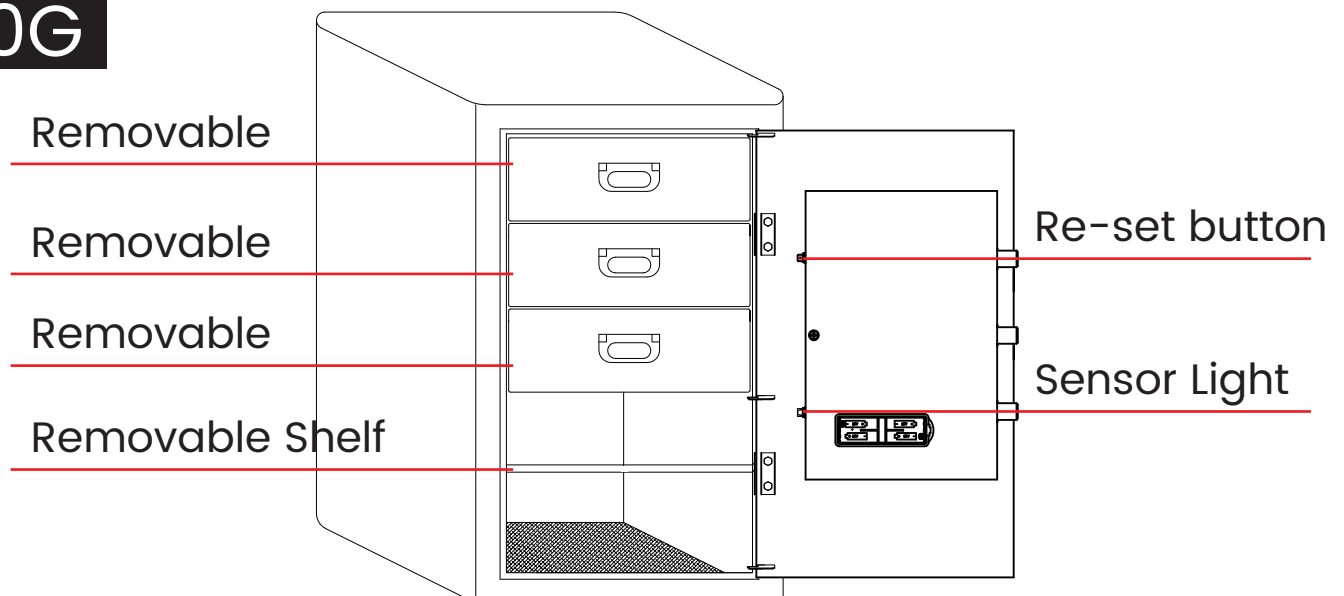


# How To Open The Safe


## 1. Open the door with key

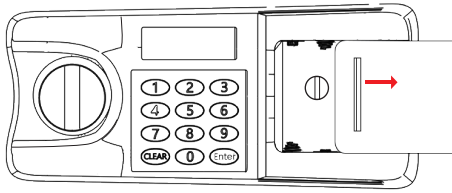

①

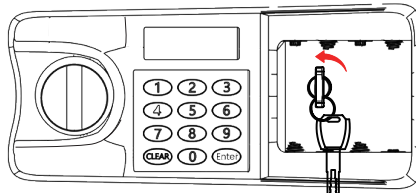

②



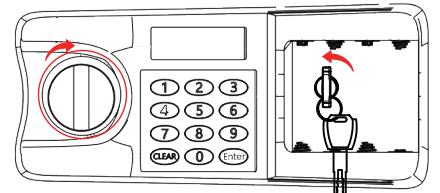


③

- ① Remove the cover
- ② Insert the key and rotate
- ③ Rotate the knob to open

**NOTE: Please keep the emergency keys out of the safe**

## 2. Open the door with password

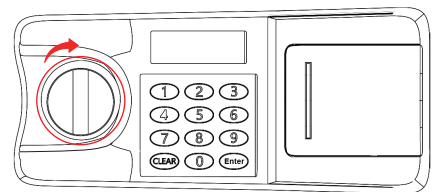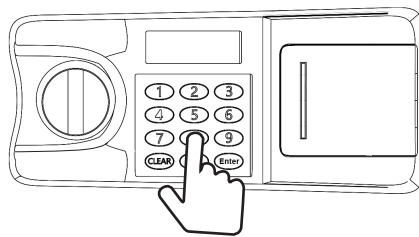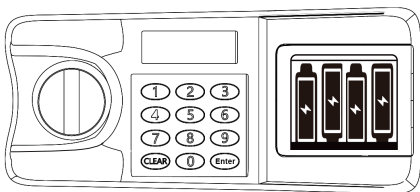

- ① Install 4 AA batteries
- ② Press enter key to wake up
- ③ Input correct password and press enter key to confirm
- ④ Rotate the knob to open

**NOTE: The initial personal password is 1234, the initial management password is 123456**

# How To Setup Your Password

## 1. How to setup new personal password

- ① Open the door with initial password and make it standby
- ② Press the re-set button behind the door
- ③ The screen will display-----
- ④ Input 1-8 digits and press enter to confirm
- ⑤ The screen will display INTO and it means sucessful

## 2. How to setup new management password


- ① Open the door with initial password and make it standby
- ② Make sure the screen is light up otherwise you need to press the enter key to wake up the screen
- ③ Press 0 button twice continuously and quickly and screen dispaly 00
- ④ Press the re-set button behind the door
- ⑤ The screen will display-----
- ⑥ Input 1-8 digits and press enter to confirm
- ⑦ The screen will display INTO and it means sucessful

## Alarm Function

- ① Press the "0" button once while safe is in locked state
- ② The screen will display "BELL on" and enter alert state
- ③ The safe will alarm if it is vibrated or moved
- ④ Enter correct password or the battery run out will relieve the alarm statue

# Removable Drawer Details

## 1. How to remove the drawer

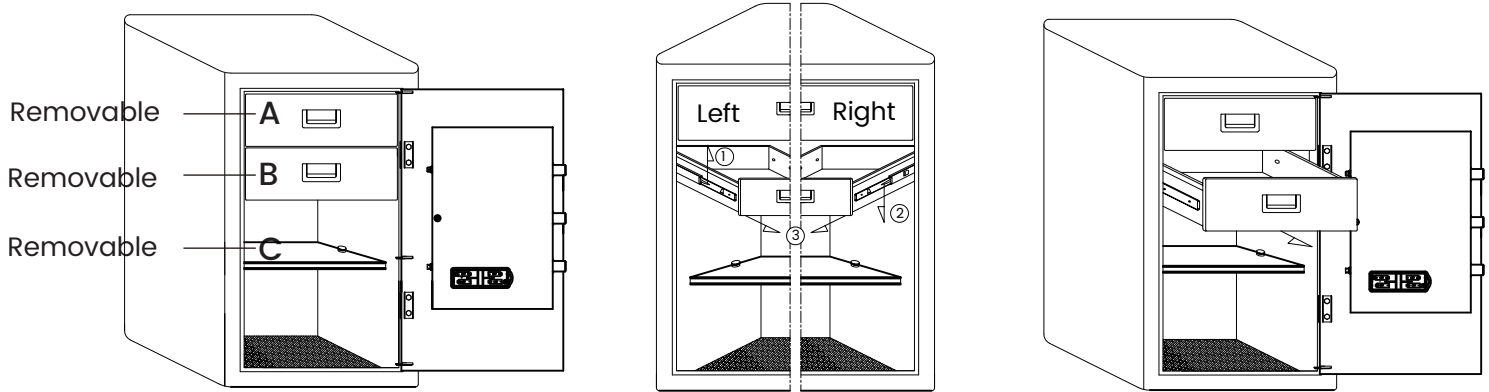


**Note: If you feel the lower space of the safe is not large enough for your daily use, you can refer to the following steps to remove the drawer**

- ① Lift Up The Clip
- ② Press Down The Clip
- ③ Pull Out the drawer


**Note: Lift up the left clip and press down the right clip at the same time**

## 2. How to install the drawer

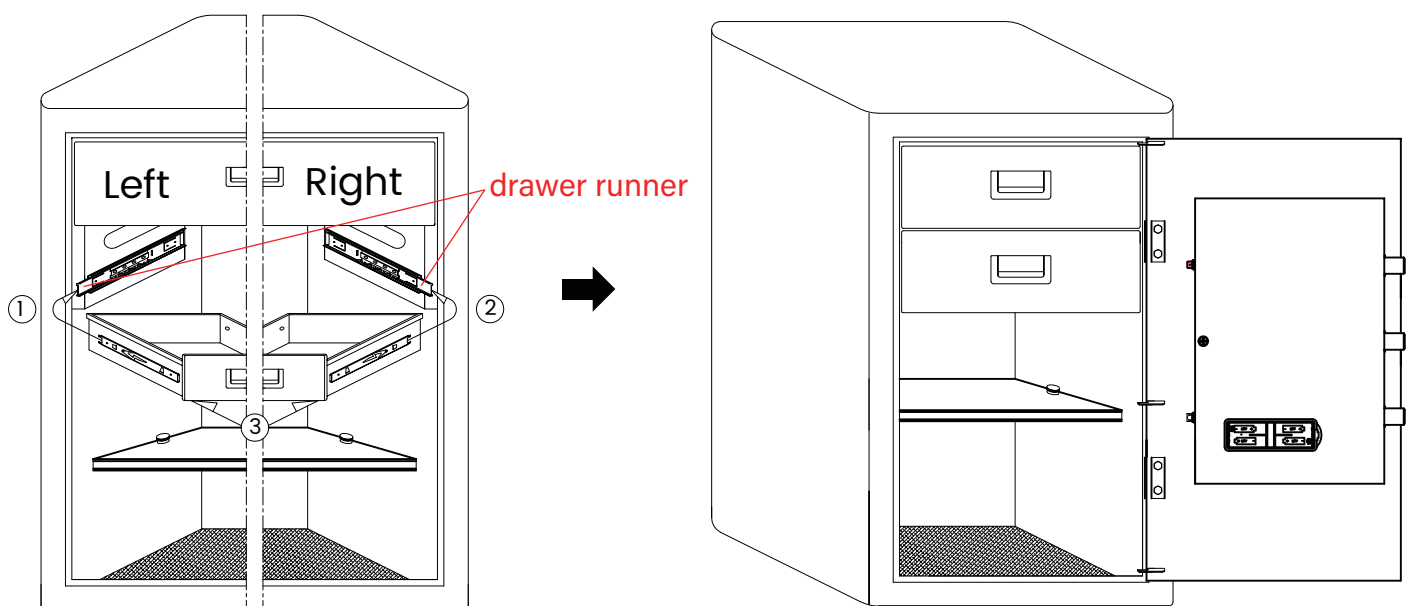


- ① Fix the left and right drawer runner inside the safe with your finger
- ② Line up the drawer with left and right drawer runner
- ③ Push the drawer in


# Steps for Mounting

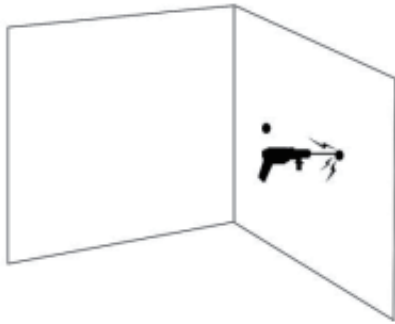

Step 1

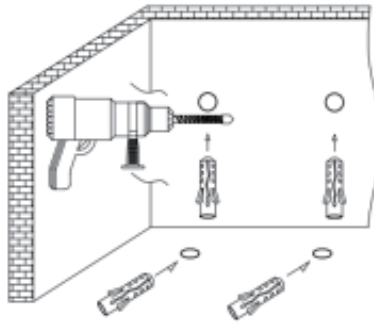

Step 2

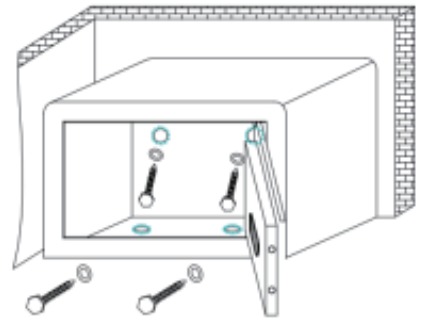

Step 3

- ① Drill the appropriate size holes for the anchors you are using
- ② Carefully press the anchor into the holes at this time
- ③ Mount the safe by running screws from inside of the safe and securing to anchors. Ensure the safe is mounted securely

